

Instruction manual for butt plate EVOLUTION

mounting screws for

SuperGrip rubber pad

#### **Contents:**

- 0. Designation
- 1. Installation
- 2. SuperGrip rubber 5mm and 10mm
- 3. Adjustment of the upper and lower blade
- 4. Adjustment of the blade-spacing
- 5. Adjustment of the vertical axis
- 6. Converting from Standard to Free Rifle
- 7. Accessories

# 0. Designation bore for additional weights upper blade mounting screws for upper blade mounting screws for SuperGrip rubber pad screws for mounting butt plate to stock locking screw for upper blade butt plate top mounting screws for lower blade positioning screw locking screw for lower blade burls with SuperGrip rubber butt plate base lower blade straight butt plate base bore for additional weights positioning pins curved butt plate base guide rail SuperGrip universal joint rubber short link end fitting universal joint lower SuperGrip upper SuperGrip rubber pad 5/10mm rubber pad 5/10mm middle SuperGrip rubber pad 5/10mm


## 1. Installation of butt plate

The butt plate EVOLUTION can be mounted on nearly any type of rifle. If you can not fit it on your rifle use the universal adapter plate.

First remove the old butt plate from your rifle.

On the lower part of the butt plate EVOLUTION, straight or curved, you will find slotted holes for mounting.

You may use the screws from your old butt plate, but make sure the screw heads do not touch the moving parts of the butt plate. If they do, use screws with a flatter screw head or reduce the thickness of the screw head.

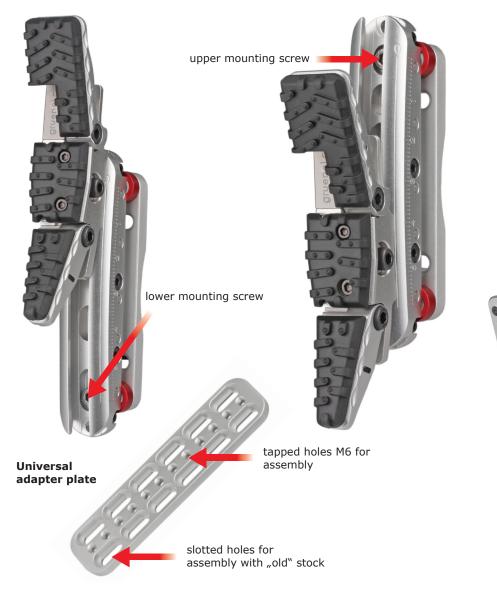

## 2. SuperGrip rubber pads 5mm and 10mm

The SuperGrip rubber pads are available either in 5mm or 10mm thickness and can be used for all disciplines. The SuperGrip rubber pads can be mounted on the upper or lower blades or on the butt plate body or on all three parts.

On all three locations you can chose between 5mm or 10mm thick SuperGrip rubber pads.

The SuperGrip rubber pads are attached to the blades with Torx screws from the back side of the blades. Use the Torx wrench included.

To mount the SuperGrip rubber pads on the lower blade remove the blade from the butt plate body. This is the only way to access all the screws. assembly of the SuperGrip rubber pad on the upper blade



assembly of the SuperGrip rubber pad on the lower blade



Industriestrasse 22 CH-6102 Malters Tel +41 41 499 90 40 Fax +41 41 499 90 49

Email Internet info@gruenel.ch www.gruenel.ch

### 3. Adjusting upper and lower blades


The inclination of the blades is adjustable. Remember to keep the inclination within the allowable limits.

Adjusting procedures are the same for upper and lower blades.

Loosen blade locking screw by  $\frac{1}{2}$  turn, then adjust the blade angle with the Allen wrench.

- To decline the blade turn wrench clockwise
- To incline the blade turn wrench counterclockwise.


After adjusting blades tighten locking screws.

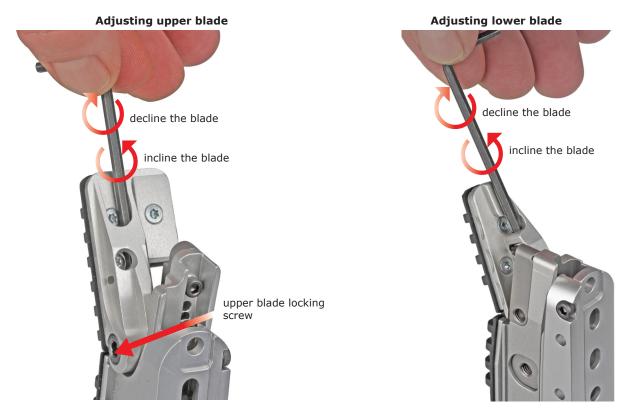

### **Caution:**

Make sure you do not exceed **20mm** between the highest point of both blades and the highest point of the butt plate body, or you will exceed ISSF regulation.

To check the setting place a straight edge across the blades and measure to the highest point of the butt plate or SuperGrip rubber pad if used.

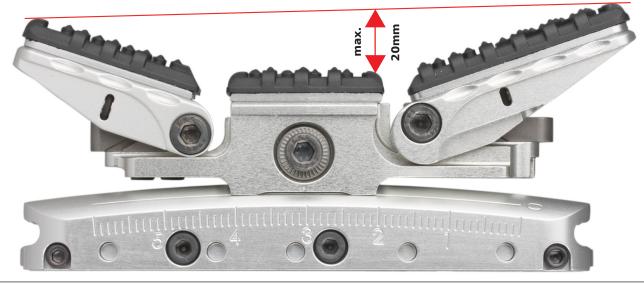

Industriestrasse 22 CH-6102 Malters Tel +41 41 499 90 40 Fax +41 41 499 90 49

## 4. Adjustment of blade spacing

The distance between the blades is adjustable. The upper blade can be located at 4 positions and the lower at 2.

Adjusting upper blade.

Remove both blade mounting screws on the back side of the butt plate body. Slide blade into desired position without removing blade from the butt plate body. When you have positioned the blade insert the blade mounting screws, making sure that one screw is in the outer most hole of the plate body. Place the other screw into a hole that lines up with the blade. Tighten both screws.

Adjusting lower blade. Same as adjusting upper blade.

View from behind




This screw must always be in this position

The position of this screw may vary according to blade location



baseline

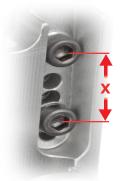

### Caution

Bear in mind to mount the inner (variable) screw as for as possible away from the outer screw for max. stability

### 5. Adjustment of vertical and radial axis

The vertical position of the butt plate can easily be adjusted by loosening the positioning screw. One turn is enough. When the butt plate is in the desired position tighten the screw. A scale at the right side of the base will assist you in replicating previously used positions. The middle position is at 3.5 on the scale. From this position you can move the plate up or down by 4 cm.

For the radial axis you will find a base line engraved into the butt plate base.

For radial adjusting loosen the positioning screw by one turn. Now you can adjust the butt plate by 15° in either direction. When the butt plate is in the desired position tighten the posititioning screw.



scale on the base

positioning screw



Email info@ Internet www

### 6. Converting the butt plate, EVOLUTION from Standard to Free Rifle

The butt plate can be converted to a free rifle plate. To do this you'll need a hook assembly. Three hook assemblies are available for the butt plate EVOLUTION.

- Hook assembly complete without SuperGrip rubber pads.
- Hook assembly complete with 5mm thick SuperGrip rubber pads.
- Hook assembly complete with 10mm thick SuperGrip rubber pads.


To install the hook assembly on the butt plate remove the lower blade by removing two blade mounting screws. Insert the hook assembly into the blade guide way, then gently push the hook upwards to insert the positioning pin(s) into the bore(s) of the butt plate body. Use the same screws to fasten the hook firmly to the body.

#### Note:

The hook assembly without SuperGrip rubber pad has one pin only.

The two universal joints allow adjustment of the hook to any position. The short link between two joints can be replaced with a longer (approx. 1 cm) link.

The hook assembly is constructed in such a way that screws are accessible from the top and from below. Should the joint screws be uncomfortable when holding the rifle in the shooting position you can remedy it by interchanging the two universal joints. By doing so' the screw heads will point in the opposite direction. Make sure a lock washer is placed under each universal joint screw head. This is very important to insure good stability of the hook.

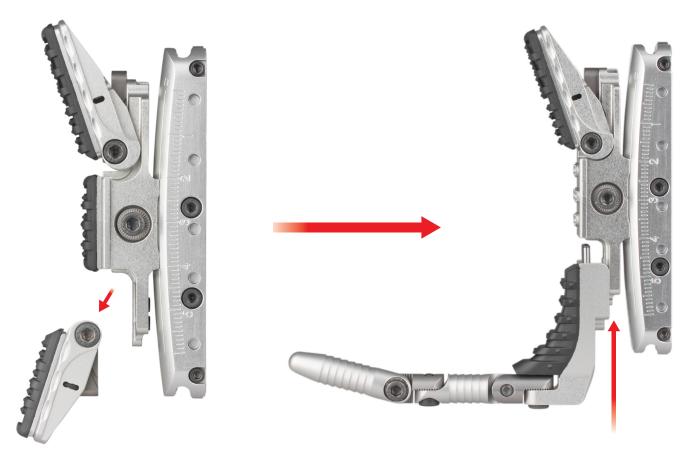

remove the lower blade from the butt plate top

mount the hook on the butt plate

#### Note:

The hook assembly cannot be inclined or declined, however the distance between the upper blade and the hook assembly can be adjusted as described in point 4. The hook can be adjusted using the two universal joints.

### 7. Accessories





Art. Nr. 14.8180 10mm SuperGrip mitte

10mm SuperGrip unten





EV Grundkörper gebogen EV curved mounting plate



Art. Nr. 14.8191

Zusatzgewicht einzeln 26g Additional weight single 26g



Art. Nr. 14.8160

Hakenverbindung 10mm SuperGrip Mounting device 10mm SuperGrip



Flügel unten Standardkappe Bottom blade for Standard butt plate

Art. Nr. 14.8175

Art. Nr. 14.8154

5mm SuperGrip Set

Art. Nr. 14.8162 Haken kurz Hook short



Art. Nr. 14.8151

Haken komplett 5mm SuperGrip Hook complete 5mm SuperGrip





Art. Nr. 14.8155 10mm SuperGrip Set



Art. Nr. 14.8158 Hakenverbindung Mounting device

Hook long

Art. Nr. 14.8152





Art. Nr. 14.8159 Hakenverbindung 5mm SuperGrip Mounting device 5mm SuperGrip



Art. Nr. 14.8163 Kurzes Zwischenstück Spacer short for hook Spacer long for hook



Art. Nr. 14.8156 5mm SuperGrip F-Set



Art. Nr. 14.8150

Haken komplett Hook complete



Art. Nr. 14.8157 10mm SuperGrip F-Set

Tel +41 41 499 90 40 +41 41 499 90 49 Fax

Email info@gruenel.ch Internet www.gruenel.ch

Art. Nr. 14.8161 Haken lang









